

Motorola DRC800 4-in-1 Universal Remote Control



User Guide


You have ten minutes to replace the batteries before your remote loses memory.

USING YOUR REMOTE

 
To select a device to control, simply press one of the device mode keys (**TV**, **AUDIO**, **DVD/VCR**, **CABLE**) at the top of your remote. After you set up the remote to control that device, you may begin using the device.

See "Programming Device Control" for more information on identifying a specific device to a device key.

 
Press this Key	To...
----------------	-------

	Turn the selected device ON or OFF
---	------------------------------------


Audio, DVD/VCR, TV, Cable	Select a device
----------------------------------	-----------------

	Direct access to Video On Demand (VOD), where available
---	---

	Direct access to Pay Per View (PPV) programming (where available)
---	---


	Rewind VCR, DVD, VOD, DVR, or HTIB
---	------------------------------------

	Play VCR, DVD, VOD, DVR, or HTIB
---	----------------------------------


	Fast Forward VCR, DVD, VOD, DVR, or HTIB
---	--


	Record to VCR or DVR
---	----------------------


	Pause VCR, DVD, VOD, or DVR
---	-----------------------------

	Stop VCR, DVD, VOD, or DVR
---	----------------------------


	Replay the previous few seconds of a program (only available with DVR models)
---	---

	Display a list of programs that you recorded. This will allow you to select one for viewing (only available with DVR models)
---	--

	Displays live television programming (only available with DVR models)
---	---

	Mute current audio feed
---	-------------------------

Press this Key	To...
----------------	-------

 
	Jump among pre-selected favorite channels (only available in CABLE mode)
---	--


Note: Favorite channels must be pre-selected through the Electronic Programming Guide before this key works.


	Display the help screen (only available in CABLE mode)
---	--


	Return to last selected channel
---	---------------------------------


	Increase or decrease volume
---	-----------------------------


	Select the next or previous channel
---	-------------------------------------


	Move up or down through menu screens or the Electronic Program Guide
---	--


	Exit any On-Screen Display (OSD) and return to regular viewing
---	--


	Display channel and program information
--	---


	Access the cable guide
---	------------------------


	Access any OSD for the currently selected device
---	--


	Move up through any OSD or cable guide menu
---	---


	Move down through any OSD or cable guide menu
---	---

 
	Move left through any OSD or cable guide menu
---	---


	Move right through any OSD or cable guide menu
---	--

	Select the currently highlighted OSD menu or cable guide choice
---	---


	View the previous or next day's cable guide
---	---

	These functions are set by your cable provider
---	--

	These functions are set by your cable provider
---	--

	These functions are set by your cable provider
---	--

Press this Key	To...
----------------	-------

	Enter a channel or device code number. To access channels lower than 100, you may need to enter 3 digits. For example, to access channel 2, press 0-0-2. For channel 22, press 0-2-2.
---	---

Input	Select the video source
--------------	-------------------------

Aspect	Change the viewing aspect (if available)
---------------	--

PIP ON/OFF	Turn Picture-in-Picture (PIP) on or off (if available)
-------------------	--

PIP SWAP	Swap the PIP signal to the main display (if available)
-----------------	--

PIP Move	Move the position of the PIP display
-----------------	--------------------------------------

PIP CH +/-	Select the next or previous channel in the PIP display (the main display does not change)
-------------------	---

PROGRAMMING DEVICE CONTROL

Each of the additional device keys controls a particular type of device. For example, the **DVD/VCR** key controls your VCR, DVR, or DVD player, but not your TV, unless you specify otherwise. See "Reassigning Device Keys".

This device key...	Controls this type of device...
TV	TV
DVD/VCR	DVD, VCR, DVR, HTIB, TV/VCR, TV/VCR/DVD, and TV/DVD
Cable	Cable box <i>only</i>
Audio	Amplifier, Tuner

To specify a device

- Look up the device you want to control in the device code list on the back of this guide.
- Press and hold a device key (**AUDIO**, **DVD/VCR**, or **TV**) for at least six seconds. The LEDs for each device key light up, then the LED for the device you selected remains on.
- Enter the four-digit code. The device key LED turns off briefly after each key press.

Note: You have 10 seconds to press each digit. If it takes longer than that, the remote "times out" and you must begin again.

- If the remote recognizes the code, the device key's LED blinks three times. You can now test the remote by pressing **POWER**. If your device responds (turns off), you have

OVERVIEW

Your new Motorola DRC800 universal 4-in-1 remote operates your Motorola or other manufacturer's cable set-top box and up to three other devices.

In addition, the DRC800 provides advanced features such as Digital Video Recording (DVR) control and Picture-in-Picture (PIP) support.

You can lock volume control to any of these devices, to make adjusting your home entertainment volume easier. See "Changing Volume Lock". The DRC800 comes from the factory without the volume locked to any specific device.

You can also change what type of device each mode key controls. See "Reassigning Device Keys".

Operating Range

Your remote controls devices from up to 50 ft (15 m) away if you are directly in front of the device, or from up to 20 ft (6 m) away if you are off to either side.

INSTALLING BATTERIES

Your remote requires 2 AAA batteries. The first set of batteries is included, and should last up to 6 months under normal usage.

- Remove the battery case cover and the old batteries (if necessary).
- Follow the diagram inside the battery case to insert the new batteries.

Note: Always use new, high quality replacement batteries. Ensure that the batteries are not damaged before inserting them into the remote.

found the right code. If your device does not respond, repeat steps 2 - 3 with the next code in the list.

If the remote does not recognize the code, the LED will turn off. Retry the code (by repeating steps 2-3 using the next code listed for your brand), or search for a device code. See "Searching for Codes".

SEARCHING FOR CODES

If none of the codes listed under "Device Codes" on the back of this guide match your device, you can search for a set of commands that will work. Your remote will sample all the codes in its system for that device mode to find one that will allow you to control your device.

1. Press and hold a device mode key (**AUDIO**, **DVD/VCR**, or **TV**) for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
2. Press a function key (such as **Power** or **Mute**). The following function keys are valid for Searching (**Power** is recommended):

- **Power**
- **Mute**
- **Play**
- **CH +**
- **Stop**

The device key's LED blinks three times, then turns off.

3. Press **▲**. The remote will send the IR command for the function you pressed in Step 2.
4. If the device performed the function you pressed, press **OK**. The remote will now control the device you selected in Step 1.

If the device did not perform the function you pressed, repeat step 3. Press **▼** to retry the previous code.

Tip: Note the code set that worked, in case you must re-code your remote:

DVD/VCR:

TV:

AUDIO:

See "Checking Codes" for more information on noting code sets.

CHECKING CODES

1. Press and hold a device mode key (**AUDIO**, **DVD/VCR**, or **TV**) for at least six seconds. The LEDs for each device key light up, then the key for the device you selected remains on.
2. Enter **9 9 0** to tell the remote you are verifying the device code. The LED blinks twice.
3. Press **1**, then count the LED blinks and write down the number. If the LED does not blink, the number is

0. This is the first digit of the device code. Press **2**, **3**, and **4** to obtain all four-code digits.

CHANGING VOLUME LOCK

Locking the volume controls to a single device makes it easier to control volume, without having to guess whether the volume will change. If you lock the remote's volume controls to the TV (for example), you will always be able to change the volume to the level you want, without having to adjust it on multiple devices.

1. Press and hold the device mode key (**TV**, **AUDIO**, **DVD/VCR**, or **Cable**) corresponding to the device you want to control volume for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.

2. Press **Volume +**.

The device key's LED blinks three times, indicating it has locked the volume control to the device you selected. The **AUDIO** device key always controls its own volume, regardless of the device is locked to volume control.

Note: If you reassign **AUDIO** to another device, such as a second TV, the second TV will always control its own volume.

Unlocking Volume Control:

1. Press and hold a device mode key (**TV**, **AUDIO**, **DVD/VCR**, or **Cable**) corresponding to the device currently locked to the volume controls for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
2. Press **Volume -**.

The device key's LED blinks three times, indicating it has unlocked the volume control for all devices.

REASSIGNING DEVICE KEYS

Each device key accesses a specific type of device (for example, the **DVD/VCR** key can only be programmed to control a DVD player, VCR, DVR, or HTIB system). This makes it easier to search for a code if your device's code does not appear on the list provided.

Your new remote allows you to change the type of device that may be assigned to a device key. That way, if you have two TVs, for example, you can control them both by changing the type of device the **DVD/VCR** or **AUDIO** key controls.

1. Press and hold the device mode key (**TV**, **AUDIO**, **DVD/VCR**, or **Cable**) corresponding to the type of device you want the reassigned key to control (for example, **TV**) for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
2. Enter **9 9 2**.

3. Press the device mode key you want to reassign (for example, **AUDIO**). That mode key's LED blinks three times and turns off, indicating that it has been reassigned.

The reassigned key automatically uses the same device code as the key you selected in Step 1. If your second device uses a different code, you may program it for the new code. See "Programming Device Control".

Note: You may not reassign the **Cable** device key to another type of device.

Assigning a Key back to Its Original Device Type:

1. Press and hold the device mode key (**TV**, **AUDIO**, **DVD/VCR**, or **Cable**) you want to reset to its original type (for example, **AUDIO**) for at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
2. Enter **9 9 2**. The mode key's LED blinks three times and turns off.
3. Press the device mode key you selected in Step 1 again. The mode key's LED blinks three times and turns off.
4. Program the restored mode key to control a device. See "Programming Device Control".

TROUBLESHOOTING

If you have trouble with your remote, try the following steps in order.

My remote is not responding

- Review the information in "Using Your Remote" to make sure that the key you pressed is active for the device you are controlling.
- Make sure you are controlling the device you think you are. See "Using Your Remote" for more information on choosing a device to control.
- Make sure your batteries are good. If battery power is low, your remote enters a "Low Battery Condition" to conserve battery power for retaining your settings. See "Installing Batteries" for more information on changing the batteries.
- Reset all settings:
 - Press and hold a device mode key (**TV**, **AUDIO**, **DVD/VCR**, or **Cable**) or at least six seconds. The LED for each device key lights up, then the key for the device you selected remains on.
 - Enter **9 8 1**.

The LED blinks twice to indicate that your remote is returned to its factory settings. You will need to reset all device code settings. See "Programming Device Control".

ADDITIONAL INFORMATION

The Motorola DRC800 does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your Motorola remote control.

No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form, or by any means, electronic, mechanical, optical, manual, or otherwise, without the prior written permission of Motorola.

MOTOROLA and the stylized M logo are registered trademarks in the US Patent and Trademark Office. All other product and service names are the property of their respective owners. Copyright Motorola, Inc. 2003.

M1072BA1

05/05



This product uses technologies licensed under one or more of the following U.S. patents:
6,587,067
6,195,033
6,496,135

DEVICE CODES

Audio Amplifiers

Boce	0674
Carver	0269
Curtis Mathes	0000
Dorian	0160
GE	0078
Herman/Kardon	0892
JVC	0131
Left Coast	0892
Linn	0269
Magnavox	0269
Mazda	0269, 0121, 0892
Nakamichi	0521
NEL	0264
Optima	0500
Pachorra	0056
Philips	0269, 0892
Prancer	0013, 0500
Polk Audio	0269, 0892
RCA	0100
Sonus	0121
Stanc	0264
Sony	0669
Soundesign	0075, 0211
Technics	0568
Victor	0531
Wards	0013, 0078, 0211
Yamaha	0133

Cable Converters (Set Top Boxes)

Director	0076
General Instrument	0476
Jerid	0476
Monika	0476, 1376
Pica	1877
Pioneer	1827
Scientific Atlanta	1877

Audio Amp/Tuners

ADI	0531
Aiso	0121, 0138, 0448
Azumi	1074, 0699
Audiochem	1189
Bose	1329
Captronic	0531
Carver	0189, 1389
Denon	1360
Herman/Kardon	0110, 0189
Integra	0135
IBL	0140
JVC	0074
Keyword	0027, 1370, 1343
KH	1428
Linn	0189
Magnavox	0189, 1269, 0531, 1189
Maram	0189, 1189, 0076, 1269
MFS	0639
Mitsubishi	1391
Orion	0133, 0842
Optima	1023, 0331, 1074, 0670
Panasonic	0039, 0309, 1318
Philips	0189, 1389, 1269
Pioneer	0014, 0190, 0531, 0630, 0023
Polk Audio	0189
Proscan	1254
Quasar	0030
RCA	1254, 0009, 0531, 1074, 1023
Saitan	0189
Sherwood	1077
Sony	0158, 1258, 0158, 1279
Soundesign	0820
Stereophonica	1073
Sunfire	1513
Tec	1074
Technics	0309, 0039, 1308, 1318
Thorens	1189
Victor	0074
Wards	0014, 0158, 0189
Yamaha	0270, 1176

TVs

Admiral	0093, 0465
Ashmet	0761, 0842, 0780, 0813, 0817
Aiko	0092
Aisco	0701
Alkal	0702, 0030, 0672
Alcon	0179
Albatron	0700, 0647
American Action	0180
Ampho	0731
Aram	0180
ATC	0030
Apex Digital	0765, 0679, 0748
Audiochem	0092, 0180, 0451, 0623
Aventura	0171
Bell & Howell	0154
BenQ	1032
Bradford	0180
Brakomni	0236, 0463
Canada	0030, 0056
Carosole	0030
Carver	0054
Celebrity	0000
Cedra	0265
Qianghong	0265
Citizen	0056, 0010, 0660, 0092
Clarion	0180
Commercial Solvents	0047
Concerto	0056
Contec	0180
Craig	0180
Crosley	0054
Crown	0180
Curtis Mathes	0080, 0030, 0047, 0054, 0056, 0093, 0145, 0154, 0166, 0451, 0466, 0702
CXL	0180
Dawson	0092, 0623, 0031, 0601, 0601, 0672
Dell	1264, 1030, 1178
Denon	0145
Dumont	0017
Durabrand	0171, 0043, 0178, 0180, 0134
Dwex	0720, 0774
Electrabrand	0000
Electrograph	1755
Elektra	1017, 1061
Emerson	0236, 0180, 0178, 0179, 0463, 0623, 0154, 0371
Emvian	0030
Epson	0840
ESA	0171
Faber	0154
Fujihsu	0809, 0179, 0683, 0853
Funai	0171, 0180, 0179
Futurotech	0180
Gateway	1755, 1756
GE	0047, 0051, 0178, 0451
Gibbler	0017, 0030
Go Vision	0888
GoldStar	0030, 0178
Grumpy	0179, 0180
Haar	1034
Hallmark	0178
Harley Davidson	0179
Herman/Kardon	0054
Harvard	0180
Haerony	0093
Helen	0865
HeLo Kitty	0451
Himura	0180
Hiarnc	0748
Hitachi	0145, 0056
Hytunda	0149
Lo	1286
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
Jensen	0761, 0813, 0817
JVI	0055, 0731
KLC	0180

Keyword	0030
KJLH	0763
KTY	0180, 0030
LE	0178, 0700, 0856, 1378
Lorimar	0056
LXI	0134, 0047, 0054, 0136, 0178
Magnavox	0054, 0030, 0179, 0700
Marsatz	0054, 1134, 0033, 0704, 0030
Matsushita	0230, 0650
Maxim	1255
Megapower	0700
Megatron	0145, 0178
Memorex	0179, 0463, 0178, 0150, 0154
MGA	0130, 0030, 0179
Mullard	0017, 0047, 0031
Mitsubishi	0130, 1298, 0178, 0093, 0036, 0888
Mitsuharu	0700, 0843
Motorola	0056
MTC	0080, 0030, 0050
Multitech	0180
NAD	0156, 0179
NEL	0030, 0477, 1704, 0882, 0150
NetTV	1755
Nikka	0178, 0030, 0092
Nokant	0824, 0740
NTC	0092
Onco	0180
Optima	0250, 0160, 0134, 0650
Optima	0887
Optonica	0093
Orion	0179, 0236, 0463, 1663
Panasonic	0821, 0250, 0850, 1410
Percy	0047, 0080, 0030, 0178, 0051, 0156
Philco	0030, 0054
Philips	0054, 0690, 1134
Pica	0030
Pioneer	0166, 0679
Portland	0092
Prima	0051, 0783, 0815, 0817
Princeton	0171, 0700
Pelon	0031
Proscan	0047
Proton	0466, 0178
Pulsar	0017
Quasar	0051, 0230, 0650
RadioShack	0180, 0030, 0178, 0154, 0047, 0056
RCA	0047, 0679, 0090
Realistic	0180, 0154, 0030, 0178, 0156
Reco	0467, 0800, 0027, 0030
Sampo	1755, 0030
Samsung	0080, 0178, 0756, 0702, 0030, 0036
Samsai	0463
Sampo	0799, 0154, 0893
Scotch	0178
Scott	0258, 0178, 0178, 0180
Seers	0154, 0156, 0047, 0054, 0056, 0171, 0178, 0179
Sharp	0090, 0491, 0031, 0688, 0049
Sheng-Chia	0093
Sony	0000, 0834
Soundesign	0178, 0179, 0180
Squareview	0171
SSS	0180
Starline	0180
Studio Experience	0843
Superscan	0866
Supreme	0000
SVA	0767, 0748, 0667
Sylvania	0054, 0171, 0030
Symphonic	0171, 0180
Tandy	0093
Tetung	1756, 1286
Technics	0051, 0230
Techni-Ace	0179
Techwood	0031, 0036
Teleska	0054, 0179, 0180, 0092, 0056, 0060, 0130
Teleteknik	0056, 0702
TMR	0056, 0178

TNCJ	0017
Toshiba	0156, 0060, 0045, 1704, 0050, 0831, 1265, 0154
TVS	0465
Vector Research	0030
Victor	0055
Vidikron	0054
Vidtech	0179
Viewsonic	0864, 0837, 0885, 1750
Vizo	1756, 0864, 0885
Wards	0054, 0178, 0030, 0056, 0179
Wayson	0156
Westinghouse	0889
White Westinghouse	0013, 0463
Yamaha	0030, 0269
Zenith	0017, 0178, 0092, 0463

VCRs

AES	1872
Admiral	0044, 0209
Adventure	0000
Aiso	0000, 0037, 0124
Aka	0175
Alenware	1972
American High	0015
Asia	0240
Audiovox	0017
Beaumont	0240
Bell & Howell	0104
Benkuens	0121, 0184, 0209, 0079, 1479
Callis	0037
Canon	0035
Carver	0001
Citizen	0037, 1278
Craig	0017, 0047, 0240
Curtis Mathes	0015, 0060, 0162, 1055
Cybernet	0240
CyberPower	1972
Dawson	0045, 1378
Dell	1972
Denon	0047
Dere TV	0139
Durabrand	0019
Dynatech	0000
Electrohome	0017
Electrophone	0017
Emerson	0032
Emerson	0184, 0209, 0121, 0479, 0000, 0037, 0043, 1278, 1479
Fisher	0047, 0104
Fuji	0033, 0020
Funai	0000
Garand	0000
Gateway	1972
GE	0035, 0000, 0240, 0007, 0035, 0060
GoldStar	0017, 1233
Gradient	0000
Harley Davidson	0000
Herman/Kardon	0081
Kenwood Packard	1972
Hi-Q	0047
Hitachi	0047, 0000, 0049
Howard Computers	1972
HP	1972
Hughes Network Systems	0738, 0042
Huana	0719
Iltek	1972
ICYPPOWER	1972
JVC	0067
KH	0017
Karwood	0067
Kodak	0055, 0037
Linkin	1972
Loong's	0000
LXI	0017
Magnasonic	1278
Magnavox	0015, 0081, 0000, 0039, 1781
Magnin	0280
Maram	0081, 0033
Marta	0017
Mitsubishi	0035, 0162

Media Center PC	1972
MEI	0033
Memorex	0104, 0047, 0479, 0000, 0037, 0048, 0033, 0240, 0039, 0162, 0209, 1237
MGA	0043, 0240
MGN Technology	0240
Microsoft	1972
Mind	1972
Mionix	0062
Mitsubishi	0043, 0067, 0607
Mitsumi	0033, 0048
MTC	0000, 0240
Multitech	0000
NDC	0067, 0104
Nikko	0037
Novus Media	1972
Noblex	0240
Northgate	1972
Olympus	0055
Onkyo	0222
Optimas	0162, 0048, 1062, 0037, 0104
Orion	0479, 0134, 0209, 1479
Panasonic	0055, 0162, 1062, 0016, 0225, 1033
Permy	0035, 0240, 0037, 0043, 1033, 1237
Pentax	0042
Philco	0035, 0479
Philips	0001, 0730, 0033, 0619
Philz	0037
Pioneer	0067
Pink Audio	0031
ProfiMusic	0240
Proscan	0060, 1060
Pulsar	0039
Quasar	0035, 0162, 1033
RadioShack	0000
Radi	0037
Randa	0037
RCA	0060, 0042, 1060, 0080, 0240, 0007, 1033
Realistic	0000, 0104, 0047, 0048, 0037, 0035
ReplayTV	0614, 0616
Recreation	1972
Rimac	0039
Samsung	1014, 0095, 0240
Sanyo	0039, 0040
Sankyo	0479, 0000, 0067, 0209, 1479
Sanyo	0047, 0104, 0159, 0240
Scot	0184, 0121, 0643, 0043
Sears	0042, 0000, 0033, 0037, 0047, 0104, 1237
Sharp	0046, 0067
Shogun	0240
Sony	0014, 0616, 0033, 0032, 0636, 1972, 0000, 0033, 1237
Stack 'N'	1972
STC	0042
Sylvania	0000, 0033, 0043, 0081, 1381
Symphonic	0000
System	1972
Tagar Systems	1972
Tec	0000
Technics	0035, 0162
Teknika	0000, 0033, 0037
Thomas	0000
Tivo	0739, 0614, 0636, 1303
TMC	0240
Toshiba	0045, 0043, 1008, 1363, 0043, 1345, 1972
Television	0037, 0240
Touch	1972
Unitech	0240
Vectra	0045
Video Concepts	0045
Videomagic	0037
Vidromatic	0240
Viewsonic	1972
Vilain	0000
Wooden	1972

Wards	0035, 0060, 0000, 0047, 0240, 0042, 0048, 0081
White Westinghouse	0209
XR-1000	0000, 0033
Zenith	0039, 0479, 0000, 0033, 0209, 1479
ZT Group	1972

TV/VCR Combination Devices

Brokama	0479, 1479
Citizen	1278
Curtis Mathes	1035
Dawson	1278
Emerson	0679, 1278, 1479
Funai	0000
GE	0240, 0807, 1035, 1060
GoldStar	1237
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	1278
Magnavox	0000, 1281
Magnex	0240
Memorex	0162, 1237
MGA	0240
Mitsubishi	0067
Optimas	0162
Orion	0679, 1479
Panasonic	0162, 1033
Permy	0240, 1033, 1237
Philco	0479
Quasar	0162, 1033
RadioShack	0000
RCA	0240, 0807, 1033, 1060
Samsung	1014
Sanyo	0679, 0000, 1479
Sears	0000, 1237
Sony	0000, 1237
Sylvania	1281
Symphonic	0000
Thomas	0000
Toshiba	0845, 1143
Zenith	0679, 0000, 1479

TV/VCR/DVD Combination Devices Controlled by the VCR Key

Sharp	0067
-------	------

Controlled by the DVD Key

Aku	0089
Emerson	0821
Magnavox	0821
Panasonic	1362
RCA	1132
Sharp	0630
Superscan	0821
Sylvania	0821
Toshiba	1043

DVR Devices

ABS	1972
Altware	1972
CyberPower	1972
Dell	1972
DirecTV	0739
Gateway	1972
Hewlett Packard	1972
Howard Computers	1972
HP	1972
Hughes Network Systems	0739
Humax	0739
Hush	1972
ICEPOWER	1972
Larkys	1972
Media Center PC	1972
Microsoft	1972
Mind	1972
Novus Media	1972
Northgate	1972
Panasonic	0616
Philips	0618, 0739

RCA	0880
ReplayTV	0614, 0616
Sonic Blue	0614, 0616
Sony	0636, 1972
Stack 'N'	1972
System	1972
Tagar Systems	1972
Tivo	0618, 0739, 0636
Toshiba	1008, 1972
Touch	1972
Viewsonic	1972
Wooden	1972
ZT Group	1972

DVD/VCR Combination Devices

Allegro	0069
Apex Digital	1061
Dawson	0833
Go Video	0735
Hitachi	0064, 0000
IVT	0067
Memorex	0695
Panasonic	1362
RCA	0060
Samsung	1075, 0821
Sanyo	0695
Sanyo	0673, 0104
Sharp	0630
Sony	0884
Sylvania	0675, 0000
Toshiba	0503
Zenith	0889

DVDs

Advent	1016
Aku	0089
Alco	0790
Allegro	0069
Apex Digital	0072, 0830, 0796, 1020, 1036, 1061, 1913, 0737, 0294, 0797, 1004
Apex Digital	1138
Audiovox	0790
Blaupunkt	0717
Blue Parade	0571
Brokama	0895
CaseVideo	0033, 0069
Curtis Mathes	1007
CyberHome	0036, 1175, 1073, 1024
Dawson	0833, 0069
Denon	0490
Disney	0675
DV2000	0521
Emerson	0675, 0821, 0394
Enterprise	0391
Fisher	0630
Funai	0675
Gateway	1138
GE	0717, 0322
Go Video	1075, 0744, 0821, 0369, 1099, 1138, 1332
Greenhill	0717
Hitachi	0664, 0573
Hiteker	0672
Ho	1348
Intial	0717
Integra	1924
Jensen	1016
JVC	0623, 0504, 0867, 1901
Kawaaki	0790
Kernwood	0514, 0490
KLH	0790, 0717, 1020
Koss	0651, 1980
LG	0689, 0391
Liquid Video	1980
LiteOn	1138, 1058
Loewe	0885
Magnavox	0821, 1914, 1978, 0303, 0539, 0675
Marantz	0539
Memorex	0695
Microsoft	0522

Mitsub	0717, 0039
Mitsubishi	0521
Mesa	0717
Onkyo	1924, 0503
Orion	0651, 1980
Panasonic	0490, 1090, 1902, 1362
Philco	0790
Philips	0646, 1914, 0539, 0854, 0503, 0675
Pioneer	0571, 1902, 0523
Polaroid	1061
Pink Audio	0539
Prima	1016
Proscan	0522
Qwestar	0651
RCA	0522, 0571, 0822, 1103, 1974, 0737, 0790, 1132
Ro	1008
Satal	0623
Sanyo	0522
Samsung	0573, 1073, 0090, 0920, 0899, 1932
Sanyo	0695
Sanyo	0673, 0670, 0695
Sensory Science	1138
Sharp	0630, 0752
Shimono	0530, 0839
Sonic Blue	1099, 0664
Sony	0733, 1033, 1904, 1901, 0854, 1431, 1654, 2020
Superscan	0821
Sylvania	0675, 0821
Symphonic	0675
Tec	0790
Technics	0490
Theta Digital	0571
Toshiba	0003, 1043, 1134, 0695
Urban Concepts	0003
US Logic	0839
Venture	0790
Vso	0322
Tanaka	0543, 0490, 0339
Zenith	0869, 0391, 0503

TV/DVD Combination Devices

Advent	1016
Apex Digital	0000
Brokama	0695
Jensen	1016
Philips	0854
Prima	1016
RCA	1022
Samsung	0899
Sylvania	0675
Toshiba	0695

Home Theater in a Box (HTIB) Systems

Apex Digital	1913
Audiovox	0790
JVC	1901
KLH	0790
Koss	1000, 0651
Liquid Video	1980
Magnavox	1978
Onkyo	1924
Orion	1980, 0651
Panasonic	1980, 1902
Philco	0790
Philips	1914
Pioneer	1902
Pink Audio	0539
RCA	1974, 0790
Ro	0869
Samsung	1932
Sony	0869
Sony	1903, 1904, 1934, 2020
Tec	0790
Venture	0790